



ESSE
CAFFÈ

ESPRESSO IN ITALY


Sofia

INSTRUCTIONS FOR USE
AND MAINTENANCE


CONTENTS

- MACHINE COMPONENTS
- UNPACKING AND SETUP
- CREDIT RECHARGE
- DESCALING
- ISSUES RESOLUTION

MACHINE COMPONENTS

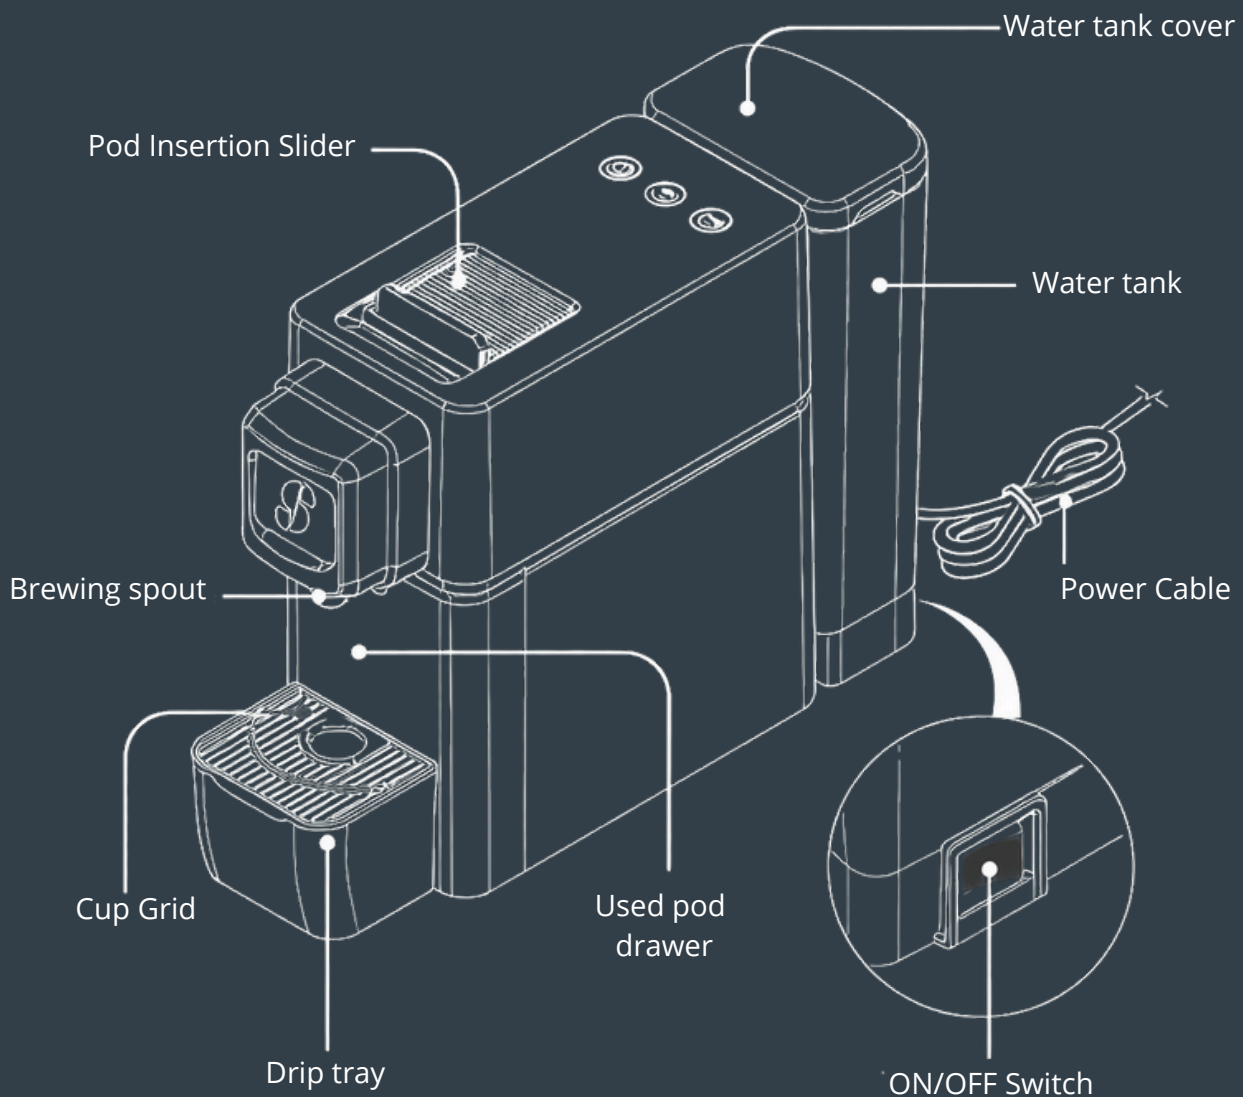

CONTROLS AND INDICATORS

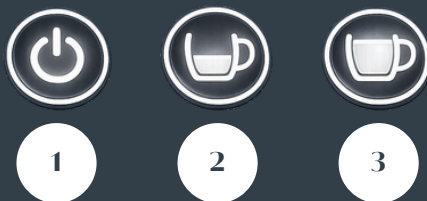

- 1 Power button
- 2 Short coffee button
- 3 Long coffee button

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.

UNPACKING AND SETUP



Remove the machine from its package and check that all components are present and not broken. The packaging components must be handled carefully due to sharp edges.




Place the machine on a flat, stable surface, far from water, flames and heat sources. When in operation, the machine must not be covered by tea towels or anything else.

1

Raise the tank cover and extract the tank itself.

If furnished, insert the anti-calc filter, and follow the instructions found with the filter.

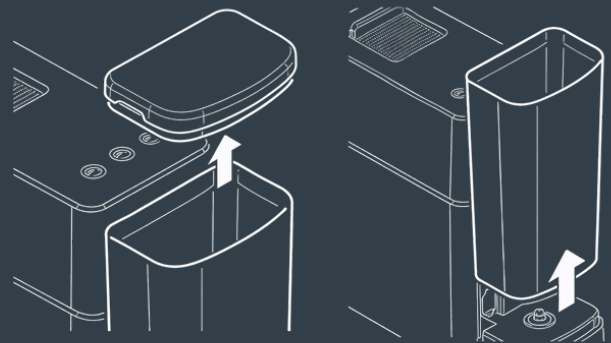


2

Fill the water tank to the MAX level with fresh clean drinking water. To do so, lift the water tank cover and fill the tank directly.

3


Plug in the machine after having verified the voltage stamped on the technical data plate on the bottom of the machine.

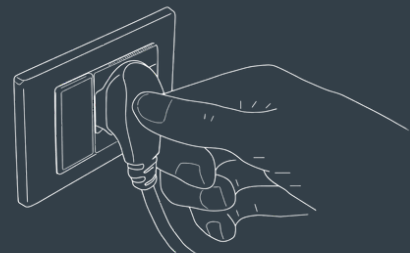

4

Turn the ON/OFF switch to ON. Button 1 will light up a steady amber color. Press button 1 to exit the energy saving mode and begin the pre-heating phase.

- When buttons 1/2/3 flash in blue, it means there are credits.
- When buttons 1/2/3 flash in amber, it means there are ≤ 10 credits.
- When buttons 1/2/3 are on steady in white, it means there are no credits.

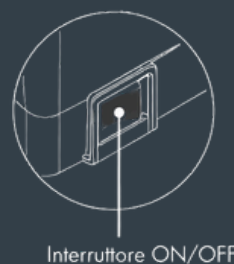

Interruttore ON/OFF



NOTES:


This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.

CREDIT RECHARGE

The system uses an integrated RFID technology that creates an ideal match between machine and pod, an essential condition for maximum in-cup quality.

Each Essse Caffè pods pack is equipped with an RFID tag that, once detected by the machine, automatically loads the settings and credits corresponding to the quantity of pods present.

Essse Caffè's RFID system (ESSSE.iD) ensures that each extraction takes place under optimum conditions, preserving performance and reliability.

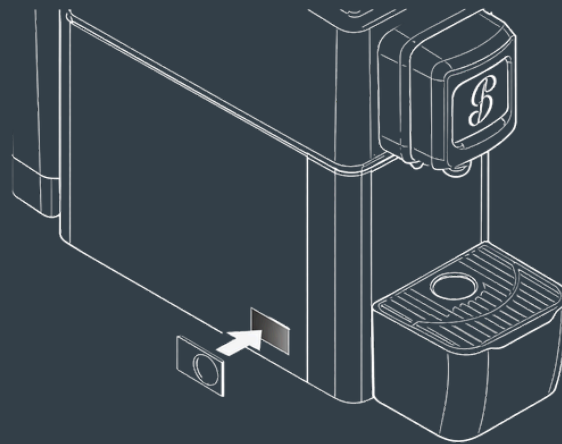

LIGHT INDICATOR LEGEND

Machine Ready (temperature)				Buttons 1/2/3 are on steady in white if there are no credits.
				Buttons 1/2/3 are on steady in amber if there are equal to or more than 10 credits.
				Buttons 1/2/3 are on steady in blue if there are credits.
Descaling Necessary				Button 1 on steady Buttons 2/3 flashing with colour depending on credit status

For additional light combinations, refer to page 9 of the use and maintenance manual.

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation.
For full technical details, always refer to the official manual supplied with the machine.

CREDIT RECHARGE

1

Tear the flap of the box along the dotted line to obtain the card-shaped card with the ESSSE.iD tag.



2

Switch on the machine and make sure it is in the Ready state.

3

With a single movement, place the card with the tag on the “ESSSE.iD” logo and hold it steady during the reading.



4

The machine will start the reading process, which takes about 4 seconds. During this phase, it is essential not to remove the card until the confirmation beep is heard.

5

After a correct reading, the credits are updated and the buttons turn on steady in green.



NOTES: While loading credits, it is fundamental not to remove the card, if the card is removed too early loading is unsuccessful and the buttons turn on steady in red.

When remaining credits fall below 10, buttons turn on steady in amber, indicating to the user that credits are about to finish.

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.

DESCALING

To ensure coffee quality and extended life of the machine, it is recommended to periodically perform a descaling cycle.

The machine automatically counts the number of coffee dispensations and, after approximately 600 coffees, signals the need for descaling by flashing the coffee buttons. The flashing colour varies depending on credit status. When this occurs, the following procedure must be carried out.

1 Fill the water tank with a solution of water and descaler, following the instructions on the descaler package.

2 Turn off the general on/off switch located on the back of the machine.



3 Open the slider, leaving the pod insertion slot open.



4 Press button 3 and hold it down while turning the on/off switch on the back, to ON.



3



5 After 5 seconds, button 3 shows amber color.

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.


DESCALING

6 Close the pod insertion slot with the slider.

7 Press button 3 amber color. The descaling cycle lasts about 25 minutes; it ends when buttons 1/2/3 are all blinking blue.



8 Remove the water tank, rinse well and fill with fresh clean water.

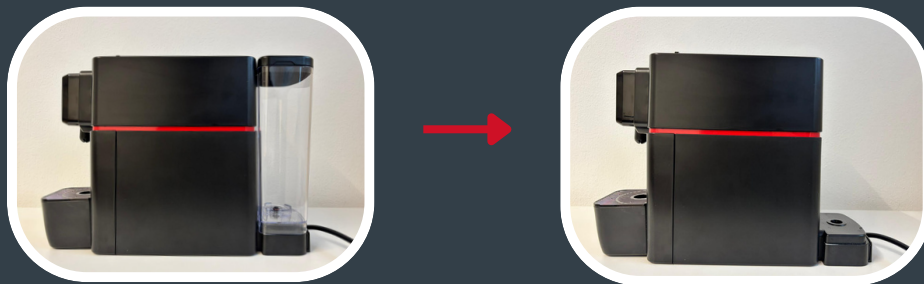

9 Place the water tank on the machine and press any button to begin the washing cycle. When the washing cycle is complete, the machine will automatically go to stand by.

10 Remove the water tank, rinse well and fill with clean drinking water. Place the water tank on the machine.

11 The machine is ready !

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.

ISSUES RESOLUTION

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The coffee is not hot enough.	• The cups are too cold. • ESSSE.iD credits finished (white buttons).	• Pre-heat the cups, dispensing hot water or use single use cups. • Recharge the credits.
The lights of buttons 2/3 flash.	• It's necessary to descale the machine.	• Perform the descaling operation on the coffee machine.
Buttons on steady in amber.	• ESSSE.iD credits = < 10.	• Recharge the credits.
Buttons on steady in white.	• ESSSE.iD credits finished	• Recharge the credits.



For faults not listed in this table or if suggested solutions do not solve the issues, contact the dealer.

NOTES:

This guide provides the main maintenance instructions, supported by images for ease of consultation. For full technical details, always refer to the official manual supplied with the machine.